


## #43155 Replacement Parlor Style Pulsator for Surge , Standard Cover

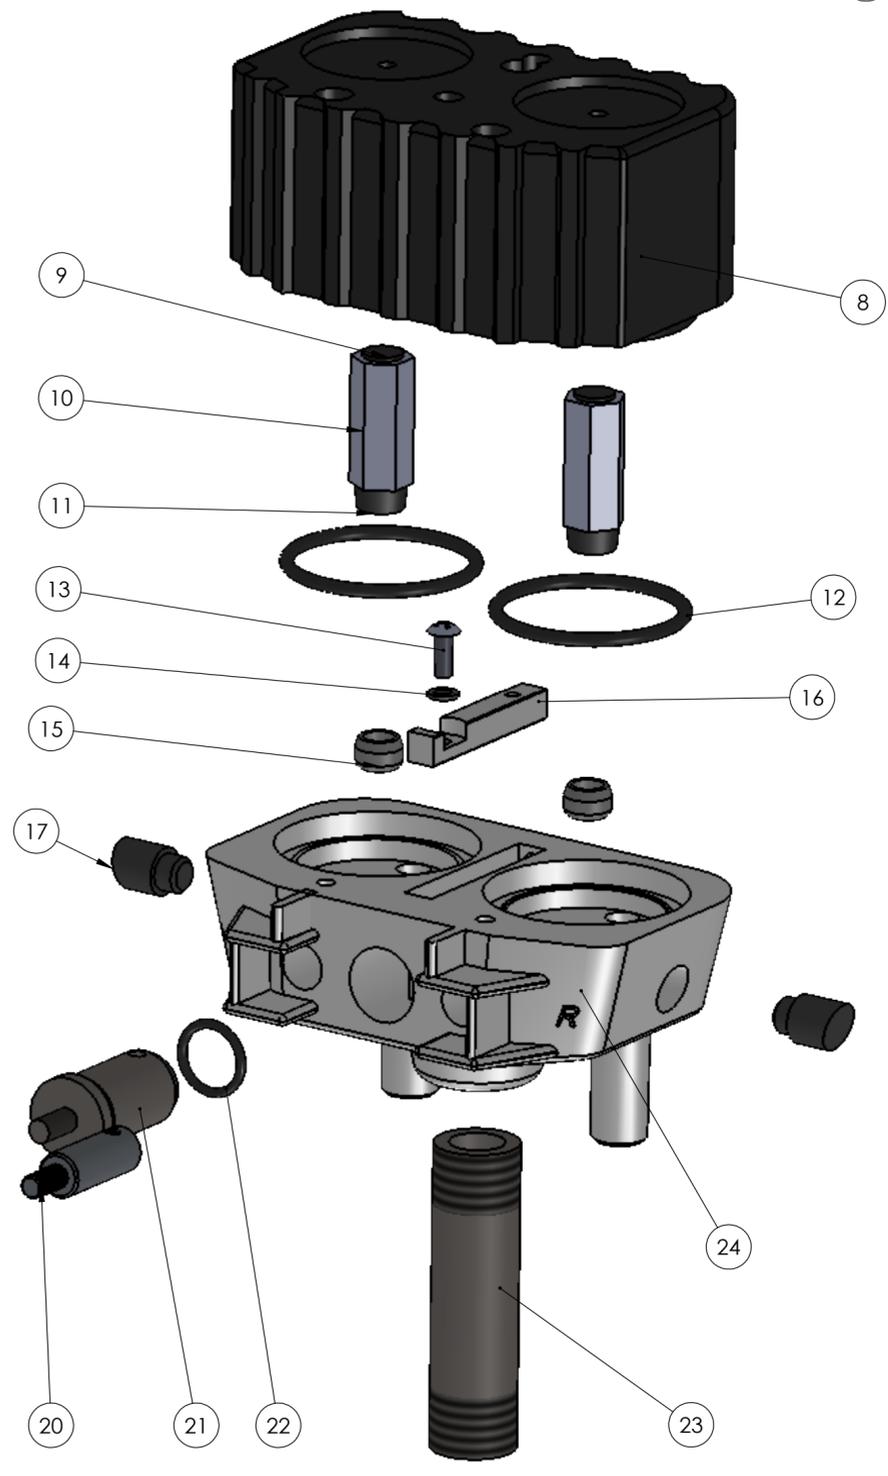

## #43156 Replacement Parlor Style Pulsator for Surge , Fresh Air Cover

ITEM	PART NUMBER	DESCRIPTION	Qty.
1	43118	Cover screw	2
2	43137	Standard cover	1
3	10600	Fresh air cover (Includes 6)	1
4	43252	Long screw	2
5	43253	Short screw	1
6	10601	O-ring for fresh air cover	2
7	NS5492	Lock washer	3
8	43115	Black coil	1
9	43108	Top plug	2
10	43104	Piston (Includes: 9-11)	2
11	43107	Bottom cap	2
12	43102	O-ring	2
13	NS5510	Screw for bridge	1
14	NS5492	Lock washer	1
15	NS43150-2	S/S piston seat	2
16	NS43150-3	Connector bridge	1
17	43171	Rubber side plug	2
18	43149	Knob	3
19	NS5481	Washer	6
20	43125	Side contact pin	2
21	NS43124	Center contact pin	1
22	NS43150-7	Center o-ring	1
23	43181	3/8" x 2.5" galvanized nipple	1
24	43157	Parlor Style Base Kit (Includes: 13-24)	1
	43105	Repair Kit (Includes: 9-12)	